

Display menu

1	A001	001 - 512 (address)
2	CH12	CH12 / 20 (Channel mode)
3	SH01	SH01 /SH03 (preset shows)
4	SP	01 - 10 (preset speed)
5	SnoF	on/off (sound active)
6	Sn01	SE01 - SE10 (sound sensitivity)
7	R255	000-255 dimmer red
8	G255	000-255 dimmer green
9	B255	000-255 dimmer blue
10	U255	000-255 dimmer white
11	SLoF	on/off (slave)
12	rdoF	on/off (display flip)
13	Z000	zoom
14	CUDO: dimmer modes	01- standard, 02-stage, 03-tv, 04- architectural , 05-theater
15	reset	reset

CHART 20 ch

1	red 1
2	green 1
3	blue 1
4	white 1
5	red 2
6	green 2
7	blue 2
8	white 2
9	red 3
10	green 3
11	blue 3
12	white 3
13	master dimmer
14	strobe 8-131 slow to fast , 140-181 pulse1 , 190-231 pulse2 , 248-255 random
15	dimmer modes
16	color macro
17	color change speed
18	color fade slow to fast
19	zoom
20	reset 128 - 255

CHART 12 ch

1	red
2	green
3	blue
4	white
5	master dimmer
6	strobe
7	dimmer modes
8	color macro
9	color change speed
10	color fade slow to fast
11	zoom
12	reset 128 -255