


XRC-CT15b
External Trigger
Contacts for XRC-
150/200
User Manual



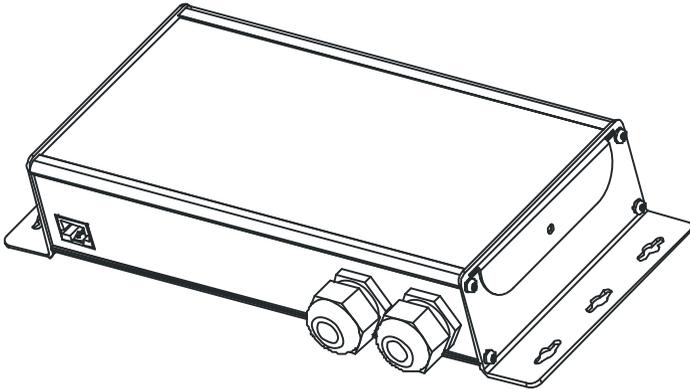

XRC-CT15b External Contacts Trigger for
XRC-150/200
User Manual
Issue 1 (2011-05-31)

Copyright © 2011 SWISSON AG

No part of this documentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, without the prior written permission of SWISSON AG.

The information in this documentation is supplied without warranty of any kind, either directly or indirectly, and is subject to change without prior written notice. SWISSON its employees or appointed representatives will not be held responsible for any damages to software, hardware, or data, arising as a direct or indirect result of the product(s) mentioned herein.

Issued by


SWISSON AG
Fabrikstrasse 21
CH-3250 Lyss
Switzerland

E-Mail: welcome@swisson.com

Table of contents

Table of contents	3
Overview.....	4
General Description.....	5
Connecting the XRC-CT15b to the XRC-150/200.....	6
Connection	6
Connecting Cable.....	7
Opening the XRC-CT15b	8
Connecting contacts to the XRC-CT15b	9
Using internal Power	9
Using external Power	9
Configuration of the XRC-150	10
Configuration of the XRC-200	10
Technical Data.....	12
Absolute Maximum ratings.....	12
Operating Conditions	12
Safety notes.....	14

Overview

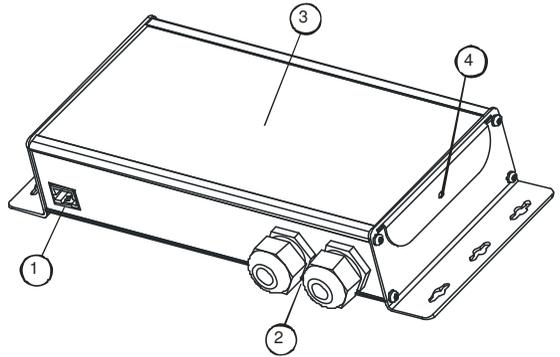


- 1 **Port Connector**
The XRC-CT15b is connected with the XRC-150/200 through this port.
- 2 **Cable Glands**
Glands for cables connected in the XRC-CT15b
- 3 **Lid**
The lid of the XRC-CT15b can be removed for connection of the contacts
- 4 **Lid Screw**
This screw holds the lid on the XRC-CT15b

General Description

The XRC-CT15b is an accessory for use with the XRC-150/200. On this device up to 15 external trigger contacts can be connected.

With these contacts the XRC-150/200 can be controlled remotely:

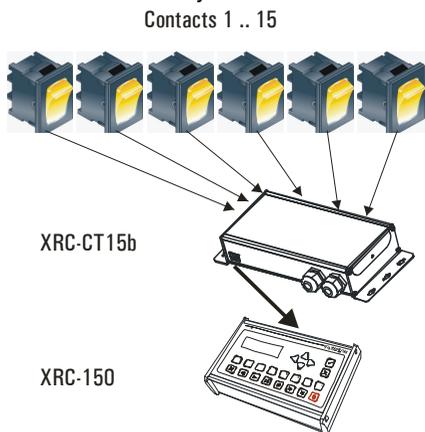


Each button can be configured to start, stop or pause, play back of a sequence on the XRC-150/200.

Connecting the XRC-CT15b to the XRC-150/200

Connection


The XRC-CT15b can be easily connected to the XRC-150/200 through running a cable from the external port of the XRC-200 or from one of the two external ports of the XRC-150 to the XRC-CT15b:

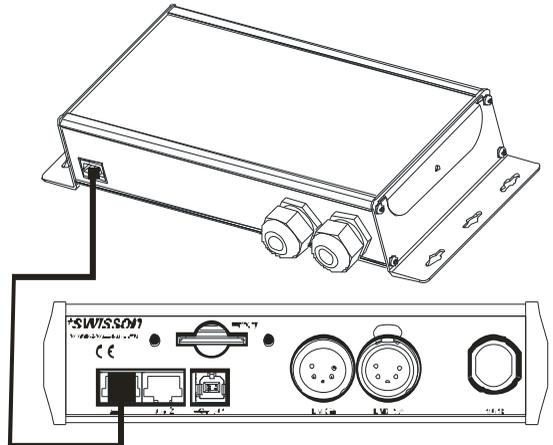

It doesn't matter on which port (port #1 or #2) the XRC-CT15b is connected to the XRC-150.

Connecting Cable


The connection of the XRC-CT15b to the XRC-150/200 is done with a standard RJ45 8 pole STRAIGHT network cable:

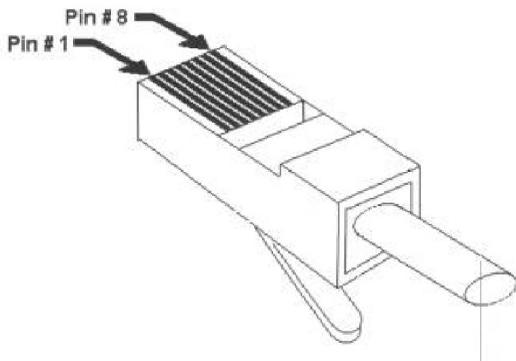


The speed of the data transmission between the XRC-CT15b and the XRC-150/200 is 250 kBaud. Therefore, the cable mustn't be very high quality.

Opening the XRC-CT15b


To connect the XRC-CT15b with external trigger contacts, the lid must first be removed. Simply remove the lid screw:

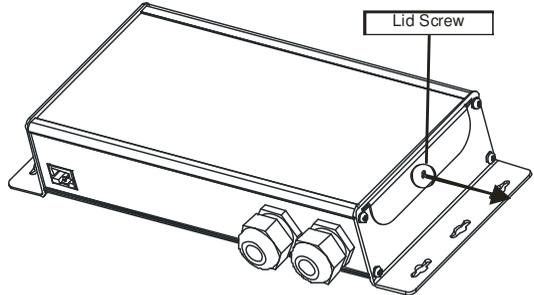

Slide out the lid of the XRC-CT15b:

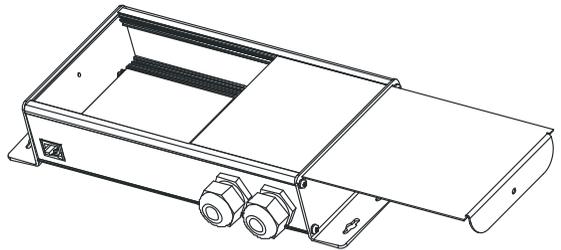

Now you can see the connecting ports (1 – 15) for the external trigger contacts and also two connectors of the internal power (VCC and GND):

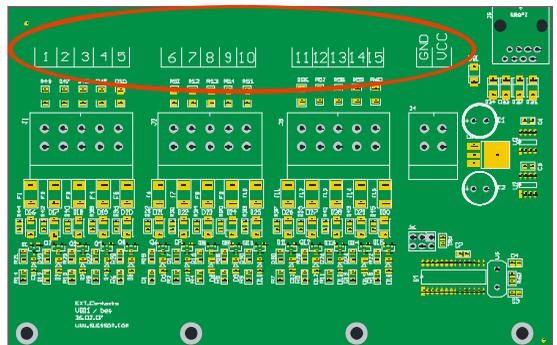


Connecting contacts to the XRC-CT15b

Using internal Power


Using the internal power of the XRC-CT15b is a very simple way to connect external trigger contacts to the device.

Simply connect a switch, button, relay or another contact with one connection to the internal supply voltage (VCC) of the XRC-CT15b, and the other connection to a dedicated input of the device:

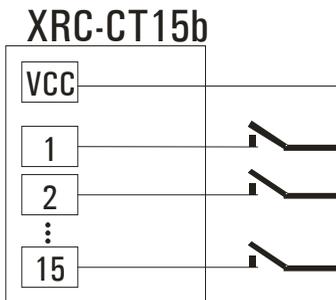

Using external Power

When using external power, it's necessary to connect GND of the XRC-CT15b to the voltage reference (ground) on the external device:

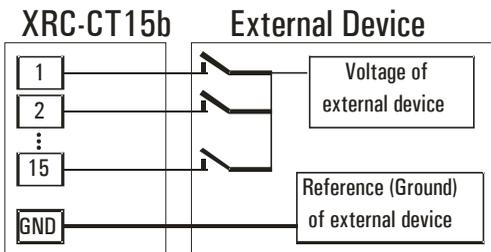

ATTENTION:

When using external power, you have to take attention to the maximum ratings!!! (See chapter Absolute Maximum ratings on page 12)

Configuration of the XRC-150

Every time a contact is activated, the XRC-CT15b sends this information to the XRC-150.

Therefore it's possible to configure each contact activity on the XRC-150 to either start, stop or pause, a sequence.

To configure the contacts, go to the menu point EXTERNAL DEVICES in the XRC-150 main menu and press the confirm/select button. Now scroll to CONTACTS CONFIGURATION and press the confirm/select button again. The following will appear on the display of the XRC-150:



Now you need to choose the contact by activating it. For example if you have connected a switch on contact1, press this switch to configure contact1:



There are three different possible actions:

1. Play Sequence:
This will start playback of one of the 32 different sequences (the sequence can be set)
2. Pause:
This will set the XRC-150 to pause or release the XRC-150 from pause during playback.
3. Stop:
This will stop the XRC-150 during play back or recording.

Configuration of the XRC-200

In order to configure the XRC-200's behavior upon events triggered by an XRC-CT15b, open the XRC-200's menu and select ADVANCED, confirm by



pressing the OK button, then select EXTERNAL CONTACTS and press the OK button. A table is displayed where each row corresponds to one of the 15 External Contacts. The leftmost column shows which contacts the row configures. The arrow keys are used to navigate within the table. When the OK key is pressed while a cell in the second column is highlighted, a menu will show up, where an action may be selected. Available actions are NONE, PLAY PLAYLIST, PLAY SEQUENCE, PAUSE and STOP. When a cell in the rightmost column is highlighted, pressing the OK key will display a list of sequence numbers if the action of the row of the highlighted cell is PLAY SEQUENCE. A list of playlist numbers will be displayed if the action of the row of the highlighted cell is PLAY PLAYLIST.

Please consult the XRC-200 manual to see how to use the XRC-CT15b with XRC-200 playlists.

Technical Data

Absolute Maximum ratings

The maximum ratings of the XRC-CT15b mustn't be exceeded; otherwise the device will be damaged.

Input voltage of contacts (1 – 15) when using external power	17V
VCC current (if you want to power another device)	250mA

Operating Conditions

VCC	7V – 8V
Activation Voltage when using external power	If the voltage of a contact exceeds 2.5V then it's activated. For another activation, the voltage first must fall below 2.0V
Switching characteristic	As soon as a contact is activated, the XRC-CT15b will send a command to the XRC-150/200. If the contact stays activated, nothing happens. To initiate the command again, the contact first has to be deactivated.
Input Power	No input power needed, power comes over the connecting cable from the XRC-150/200
Software Requirements	You must have software version 1.10 or higher installed on your XRC-150/200 if you want to use the XRC-CT15b external triggers
Operating temperature	0 °C to 45 °C
Dimensions / weight	267 mm/10.51 in x

+SWISSON

111mm/4.37in x
45mm/1.77in / 500g/1.10lbs

Safety notes

Consider the following notes absolutely when you set up, connect and use the XRC-CT15b:

- Connect the cables only with the proper plugs and sockets.
- Set the cables in an accident-proof fashion. Connected cables mustn't be stressed mechanically too much.
- Keep the device away from sources of electrical interference.
- This device is developed for only use together with the XRC-150/200 Dynamic DMX Recorder of SWISSON AG and no other devices.
- Clean the XRC-CT15b only with a soft, damp cloth. Don't use chemicals or other harsh scrubbing agents.
- Protect the device against extreme dampness, liquids, dust and dirt.
- Don't use the device in places with excessive direct sunlight or heat.
- Don't use the device in highly combustible areas.